

POLISHING & FINISHING

3-STEP / ONE-STEP



STEP 1 • HEAVY CUT



3250 Wool Pad

Max cutting power for severe defects and heavy scratches.



3251 Cutting Foam Pad

Hard cutting pad for effective defect removal.

3215 P15 X-CUT

Extreme Cut Compound




ONE-STEP

STEP 2 • MEDIUM CUT



3251 Cutting Foam Pad

Higher cut for one-step finish.

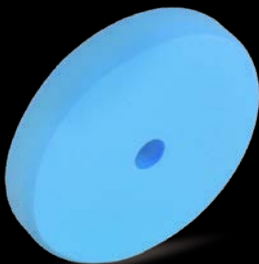

3253 Medium Foam Pad


Perfect balance between cutting and finishing.

3220 P20 ONE-STEP

All-in-One Compound



STEP 3 • POLISH & FINISH

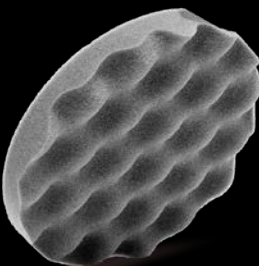

3252 Finishing Foam Pad

Soft waffle pad for hologram and swirl removal and achieving high gloss.

3290 P90 FINE CUT

Hologram and Swirl Remover



EXTREME CUT

HIGH GLOSS



3250 Wool Pad



3251 Cutting Foam Pad



3251 Cutting Foam Pad



3253 Medium Foam Pad



3252 Finishing Foam Pad

3215 P15 X-Cut

3215 P15 X-Cut

3220 P20 One-Step

3220 P20 One-Step

3290 P90 Fine-Cut

Follow us



@SilcoOfficial



@silco_official



Silco Official



@silco_official



@silco_official_

The Finest Refinish Materials